

INSTRUCTIONS for OUTSIDE PULL TRIM

<p>Cup washer & screw s.s.</p> <p>Vertical Chassis Centerline</p>	<p>Cylinder Back Plate</p> <p>Cylinder Nut</p> <p>Cylinder screws</p> <p>Rim Cylinder</p> <p>Outside by pull & Key. Key retracts latchbolt. Night Latch Pull Trim with cylinder</p> <p>03 Function Night Latch</p> <p>ATTACH COLLAR, BACK PLATE AND RIM CYLINDER TO THE TRIM PLATE WITH THE (2) CYLINDER SCREWS. ATTACH TO DOOR THRU BOLTING THE (2) SCREWS TO THE CHASSIS & (2) CUP WASHERS & SCREWS AT THE TOP & BOTTOM TO THE DOOR.</p>	<p>Outside by Pull only. Pull when dogged.</p> <p>02 Function Pull</p> <p>ATTACH TRIM TO DOOR THRU BOLTING THE (2) SCREWS TO THE CHASSIS & (2) CUP WASHERS AND SCREWS AT THE TOP & BOTTOM TO THE DOOR.</p>	<p>Outside by Cover Plate only.</p> <p>10 Function Cover Plate</p> <p>ATTACH PLATE TO DOOR THRU BOLTING THE (2) SCREWS TO THE CHASSIS.</p>
---	---	---	---

※ Tailpiece can be cut to proper length for fitting.