

## TUBULAR INSTALLATION INSTRUCTIONS

### Step 1

Verify Parts- parts shown are for Privacy, Passage contains no Privacy Pin



### Step 2

Change handing of the latch if needed- pull latch out and rotate to desired handing



### Step 3


Prep door per template, install latch and face plate



## TUBULAR INSTALLATION INSTRUCTIONS


### Step 4

Threaded portion of the privacy post on the latch is to be on the inside or non-locking side of the door. Install spindles in latch hub. Screw in one spindle to be screwed into end of other spindle to hold spindles in the latch hubs.

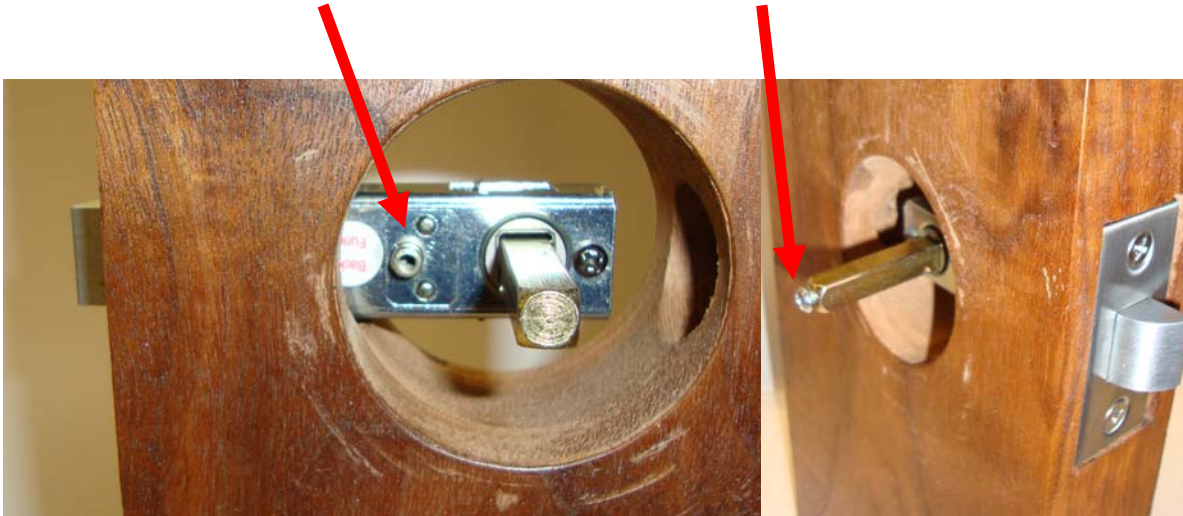

### Step 5

Install outer lever assembly on door- fit over spindle and latch. Install inside lever assembly on inside- use 2 mounting screws to attach. Spindle Pin to thread into spindle post on latch. Make sure unit is aligned before tightening screws. Install strike on door frame- line up with latch.

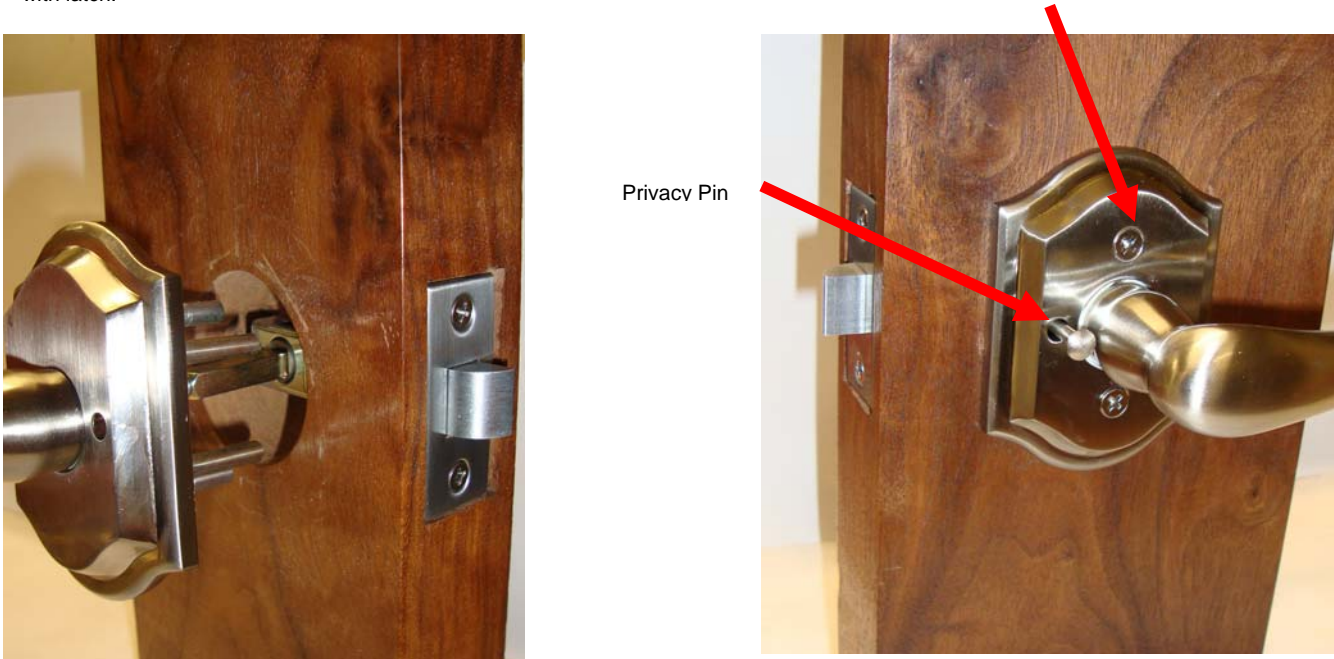

NOTE: ENSURE LOCK WORKS BEFORE LOCKING OR SHUTTING THE DOOR.