



INSTALLATION STEPS FOR TUBULAR PRIVACY SET

Step 1:

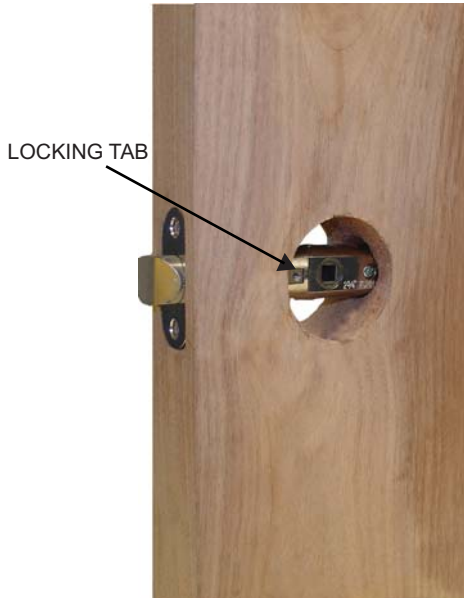

Install latchbolt as shown with the locking tab facing the inside of the room.

Step 2:

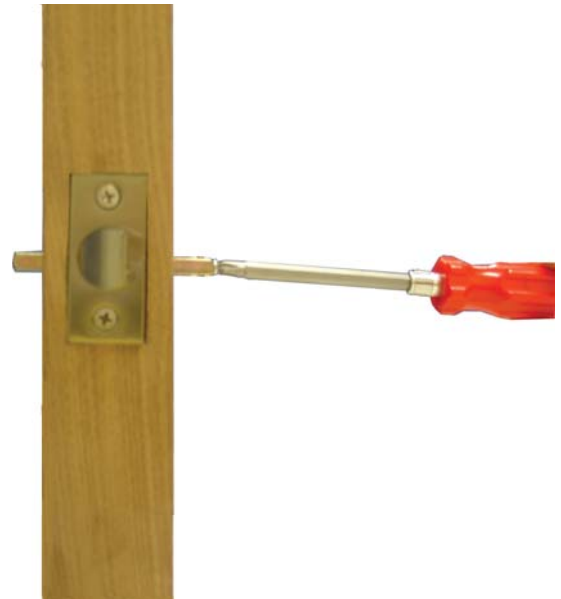

Install spindle as shown.

Step 3:



Install outside trim as shown.

Step 4:



Install the locking tab extension as shown.

Step 5:



Install inside trim & secure with 2 screws as shown.

Step 6:



Install inside rose making sure that the pushbutton holes are aligned.

Step 7:



Install pushbutton as shown & check for fit & function.

Step 8:



Please check function before closing the door!!