


**TEMPLATE FOR
INSTALLING
GRADES 1 & 2
Cylindrical Locks**

Drill 1 1/8" (25 mm)
Dia. Hole on door
edge center line

FOR 2 1/8" THK DOOR
FOR 1 3/4" THK DOOR
FOR 1 3/8" THK DOOR

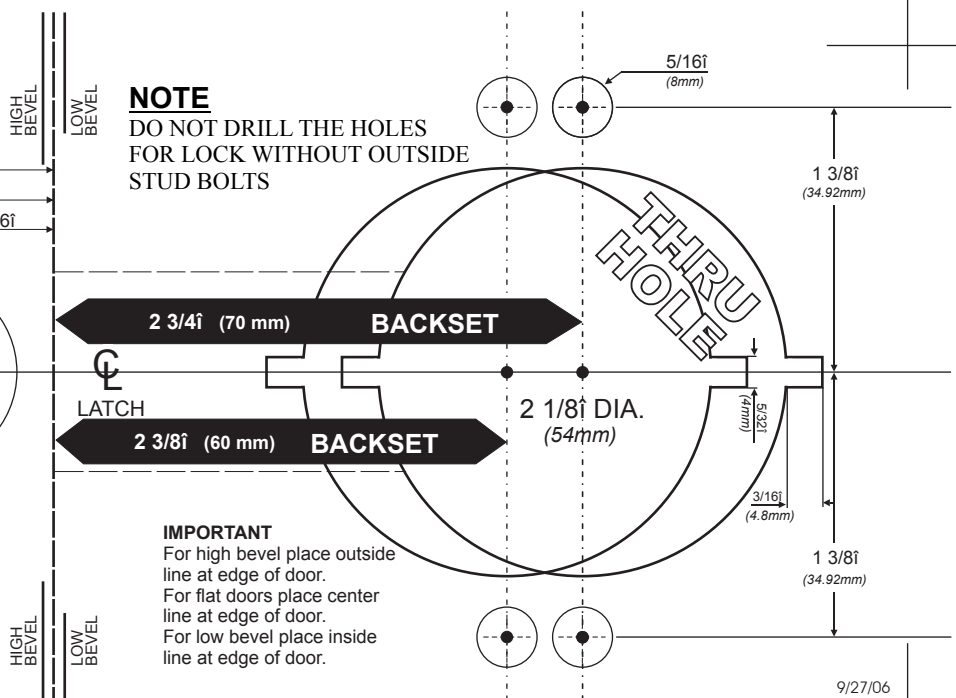

NOTE
DO NOT DRILL THE HOLES
FOR LOCK WITHOUT OUTSIDE
STUD BOLTS

IMPORTANT
For high bevel place outside
line at edge of door.
For flat doors place center
line at edge of door.
For low bevel place inside
line at edge of door.