


Fold here and  
place template  
on high edge  
of door bevel

## TUBULAR DEADLOCK

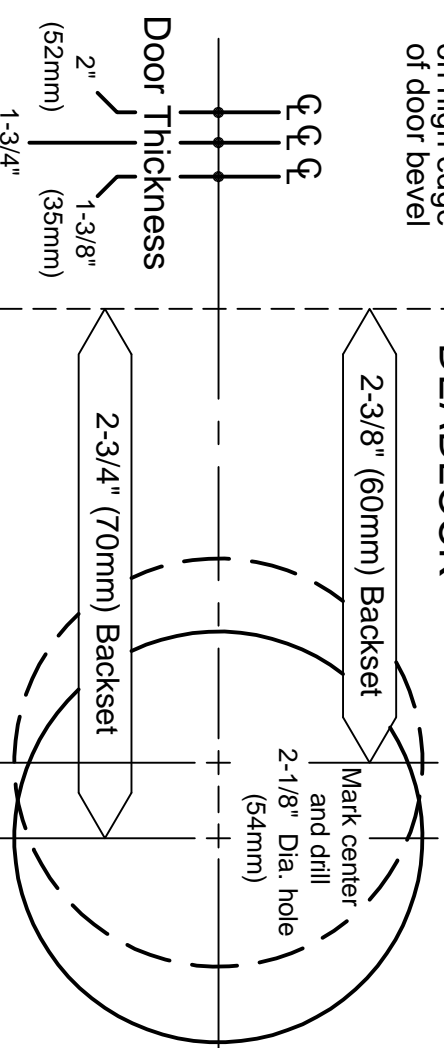

Use 1" (25mm) drill  
for Latches &  
Deadbolts

Check lock for  
Proper backset  
before drilling

WD-OD002(047)