



# TOWNSTEEL DEADBOLT INSTRUCTIONS

## STEP 1

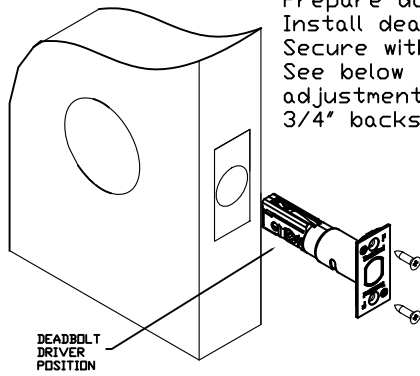


Prepare door per template. Install deadbolt as shown. Secure with 2 screws. NOTE: See below for deadbolt adjustment 2 3/8" or 2 3/4" backset.

## STEP 4

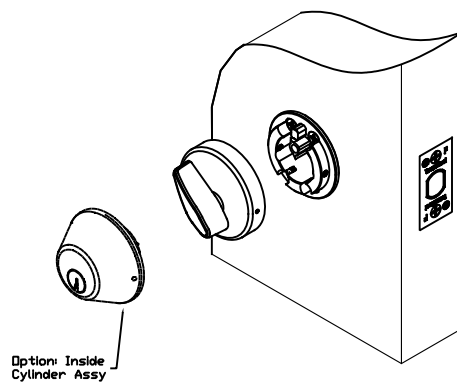


Place inside t-turn or optional inside cylinder assembly over mounting plate.

## STEP 2

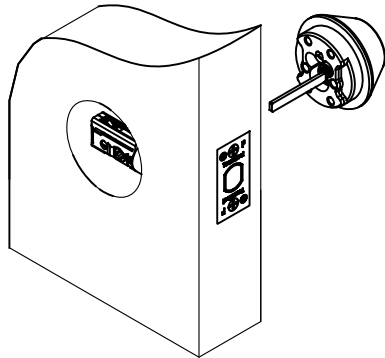

Install outside cylinder assembly as shown. Spindle blade is in the vertical position and goes through the driver on the deadbolt.

## STEP 5

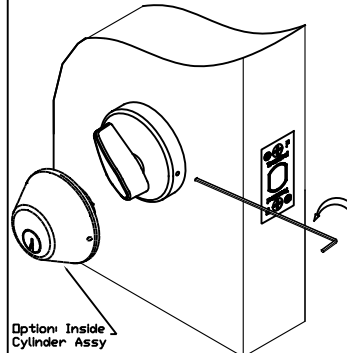


There are 2 holes on each side of the t-turn assembly (or optional inside cylinder assembly). Use the provided 5/64" allen wrench- stick it into the hole and engage the set screw on the mounting plate. Thurn the set screw counter-clockwise to secure the the t-turn. Do this on both sides. Do not over tighten. Turn the set screws clockwise to un-install.

TURN COUNTER-CLOCKWISE TO TIGHTEN. (HAND TIGHTEN- DO NOT OVER TIGHTEN)

NOTE- CHECK LOCK OPERATION PRIOR TO LOCKING THE DOOR.


## STEP 3

Install mounting plate, orient as shown. Secure with 6 screws.

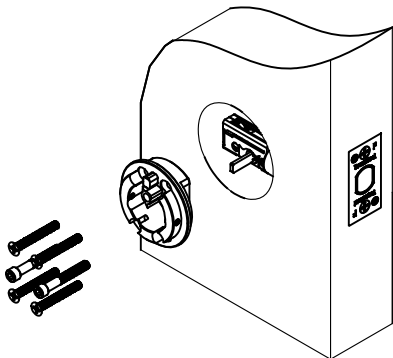

## DEADBOLT BACKSET

ADJUST THE DEADBOLT TO YOUR BACKSET. Hold the face plate and rotate the deadbolt body to the desired backset.

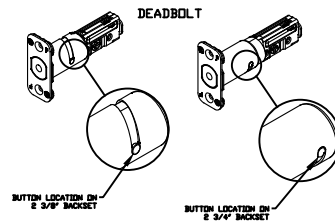

Exploded view shown with t-turn and optional inside cylinder assembly.

