




# TEMPLATE FOR SVR DEVICE (1:1)

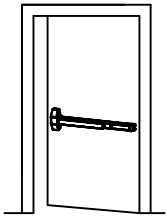


LHR

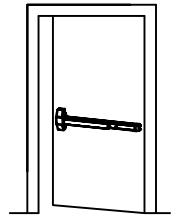


LHR

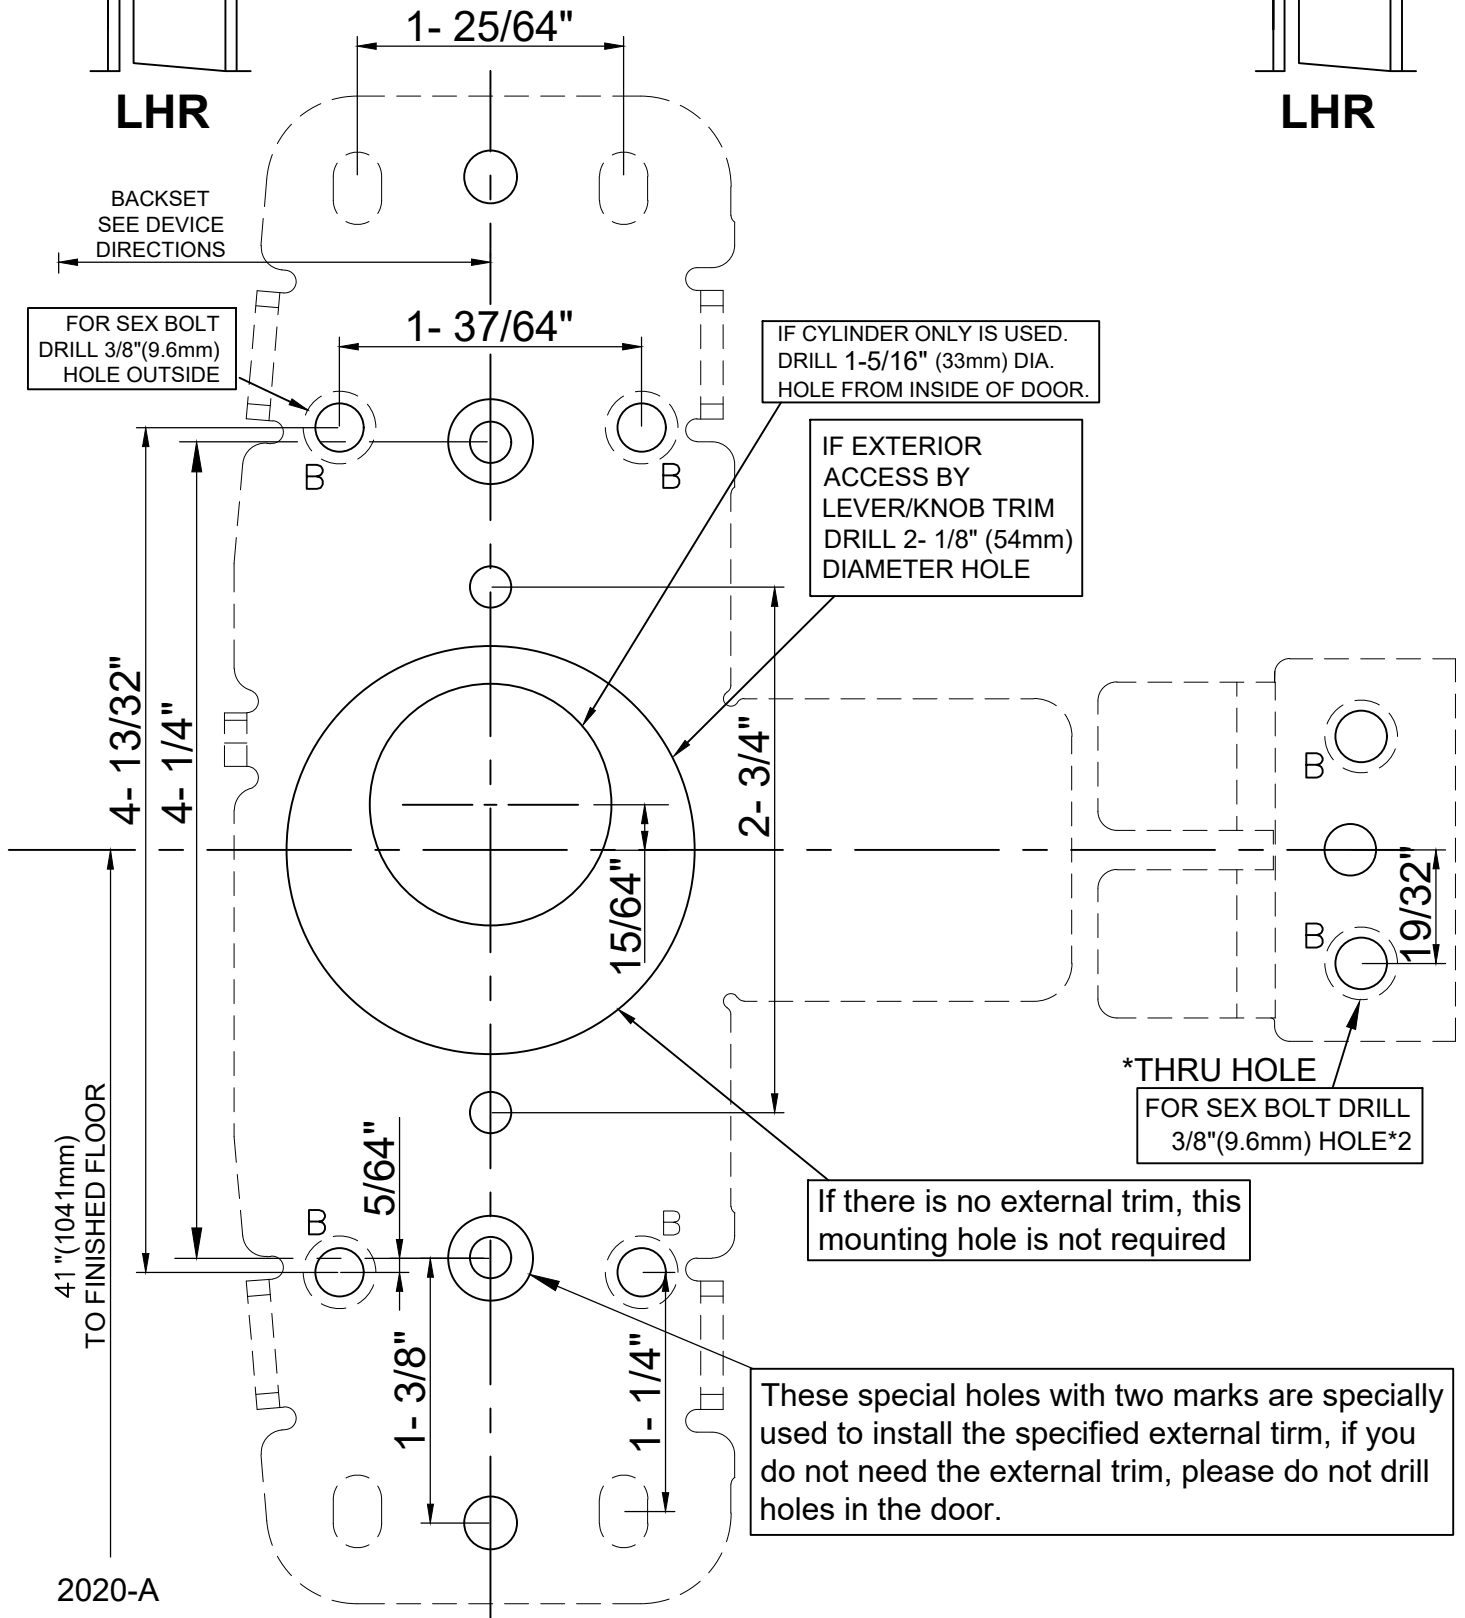


# TEMPLATE FOR SVR DEVICE (1:1)

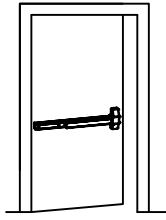

RHR

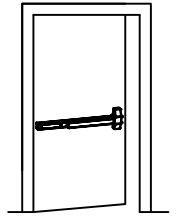


RHR

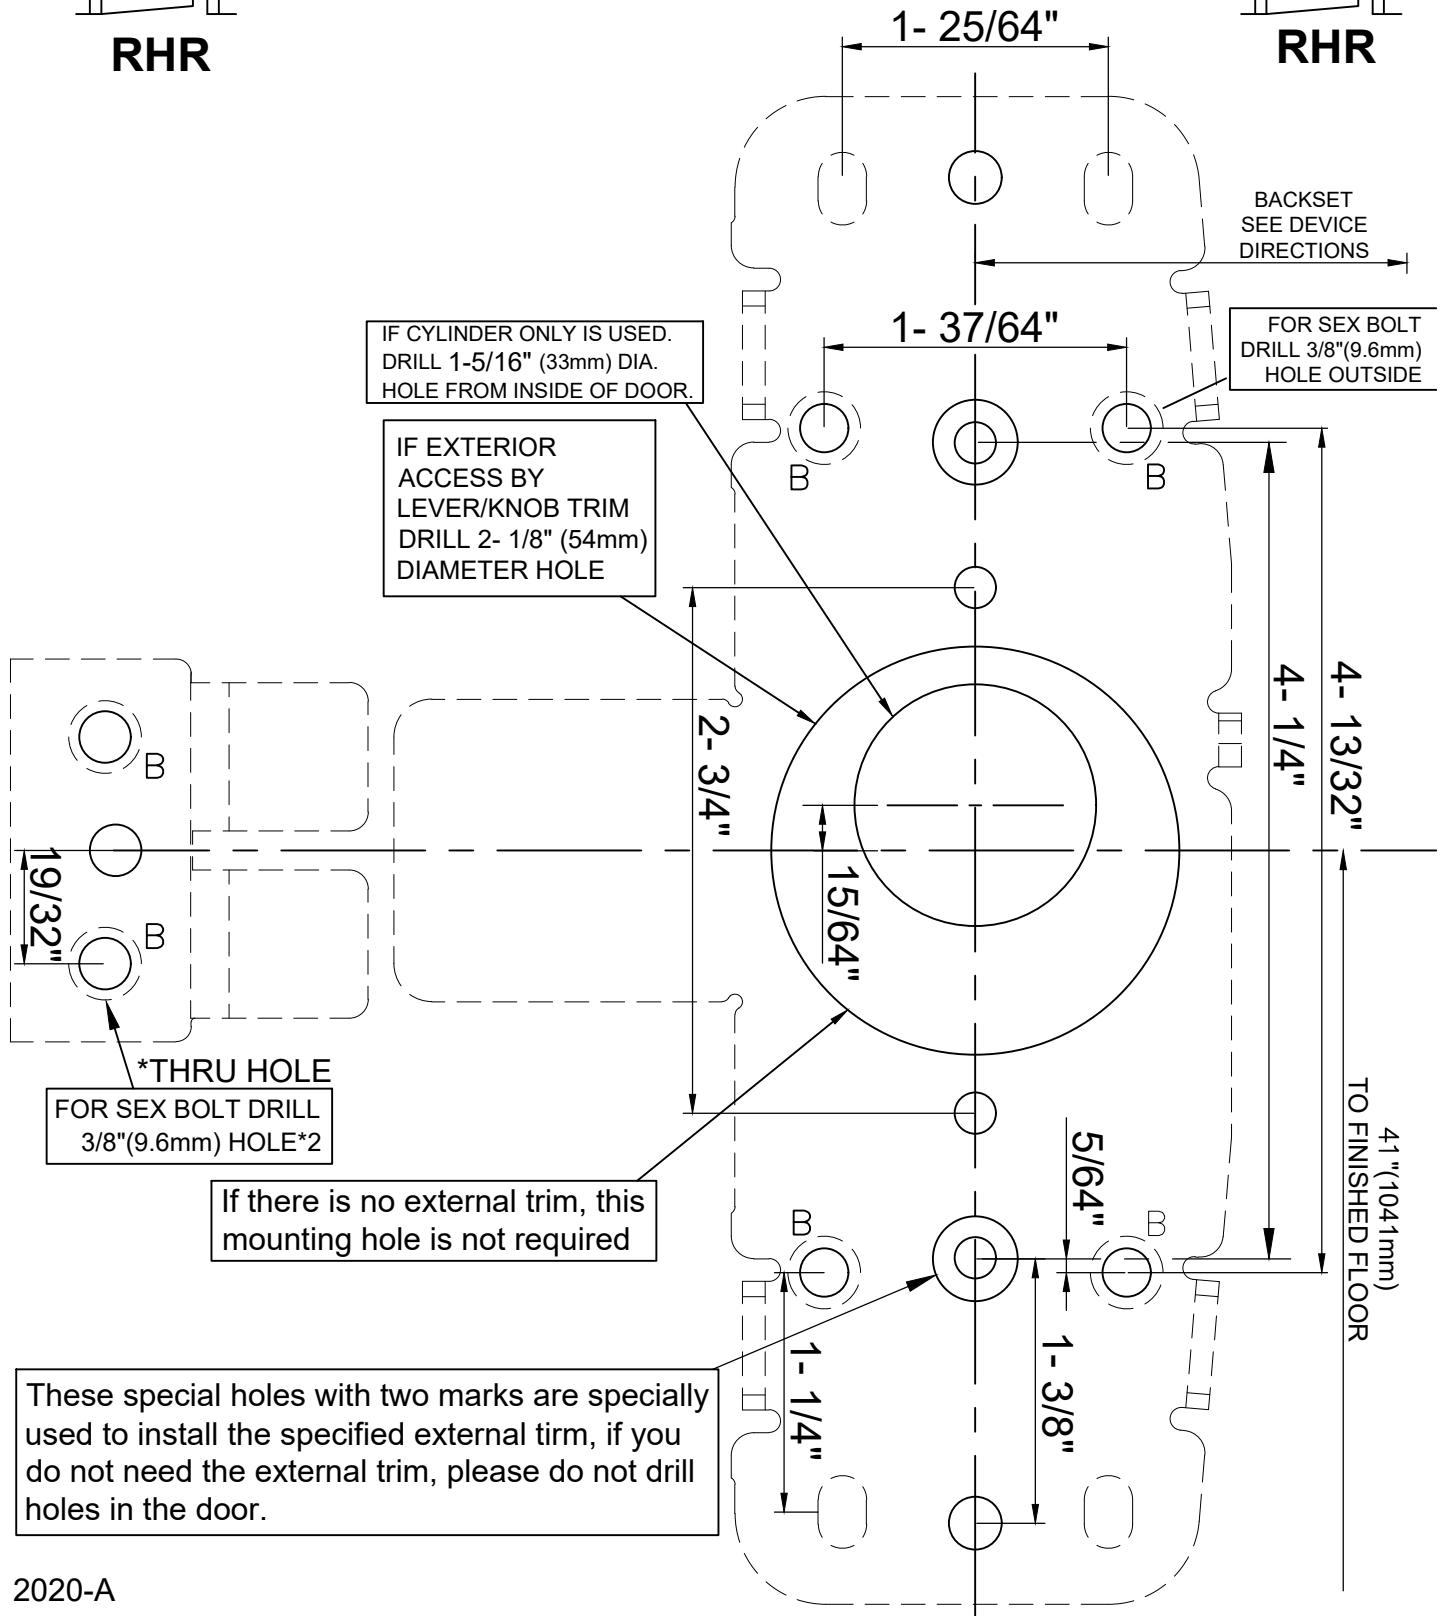



These special holes with two marks are specially used to install the specified external trim, if you do not need the external trim, please do not drill holes in the door.

# TEMPLATE of Top LATCH

**Top Strike (regular use)**

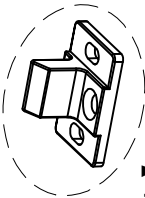

Fix/tighten (D) firstly  
then fix/tighten (C)

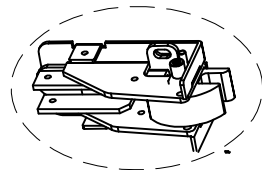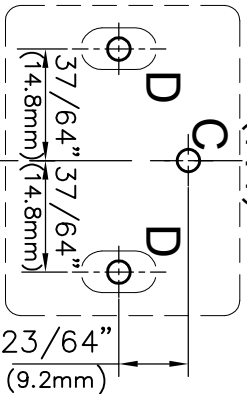


OUTLINE OF TOP CHASSIS

FOLD HERE  
ON DOTTED LINE


1-53/64"  
(46.6mm)

2-3/8"  
(60.4mm)

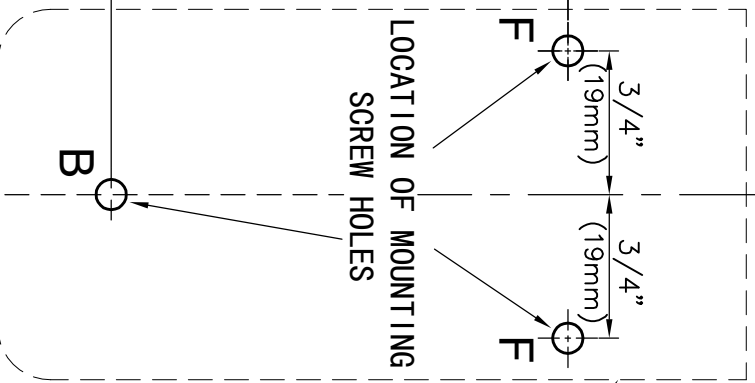


2020-A

AUXILIARY FIRE LATCH  
INACTIVE DOOR LEAF

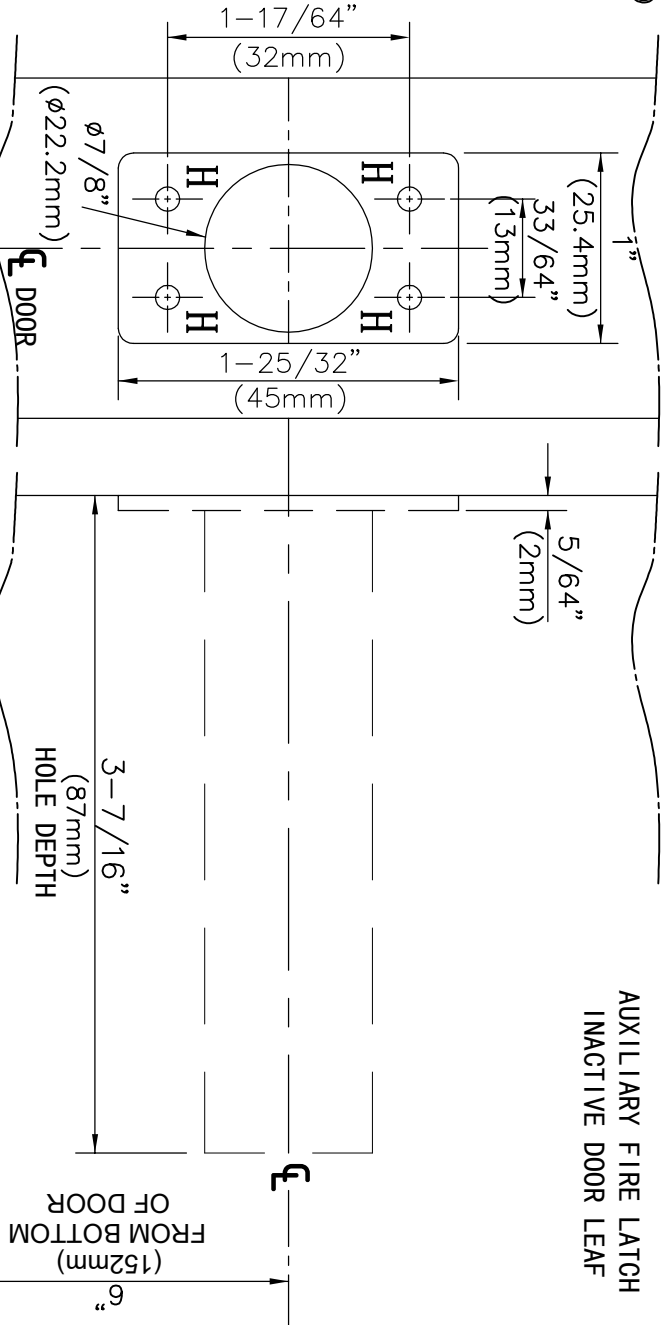

STRIKE HOLE PLUG  
ACTIVE DOOR LEAF

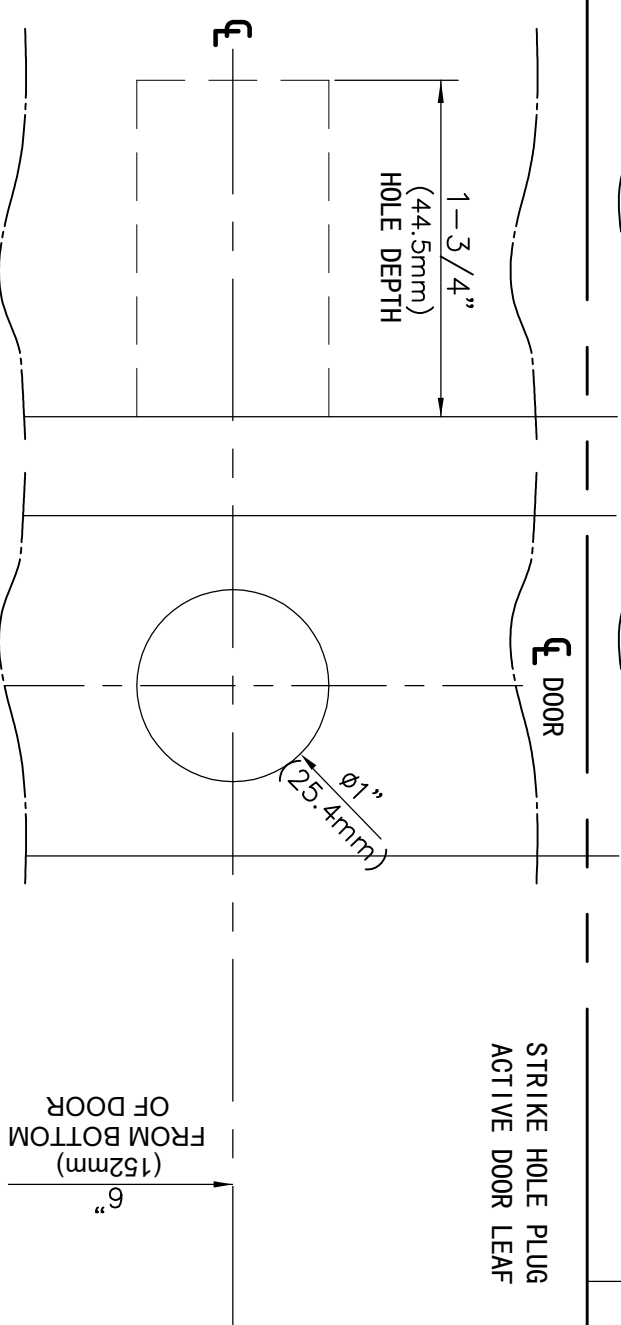

6"  
(152mm)  
FROM BOTTOM  
OF DOOR