


TEMPLATE FOR
e-Kestros RIM
EXIT DEVICE
(Electrified)

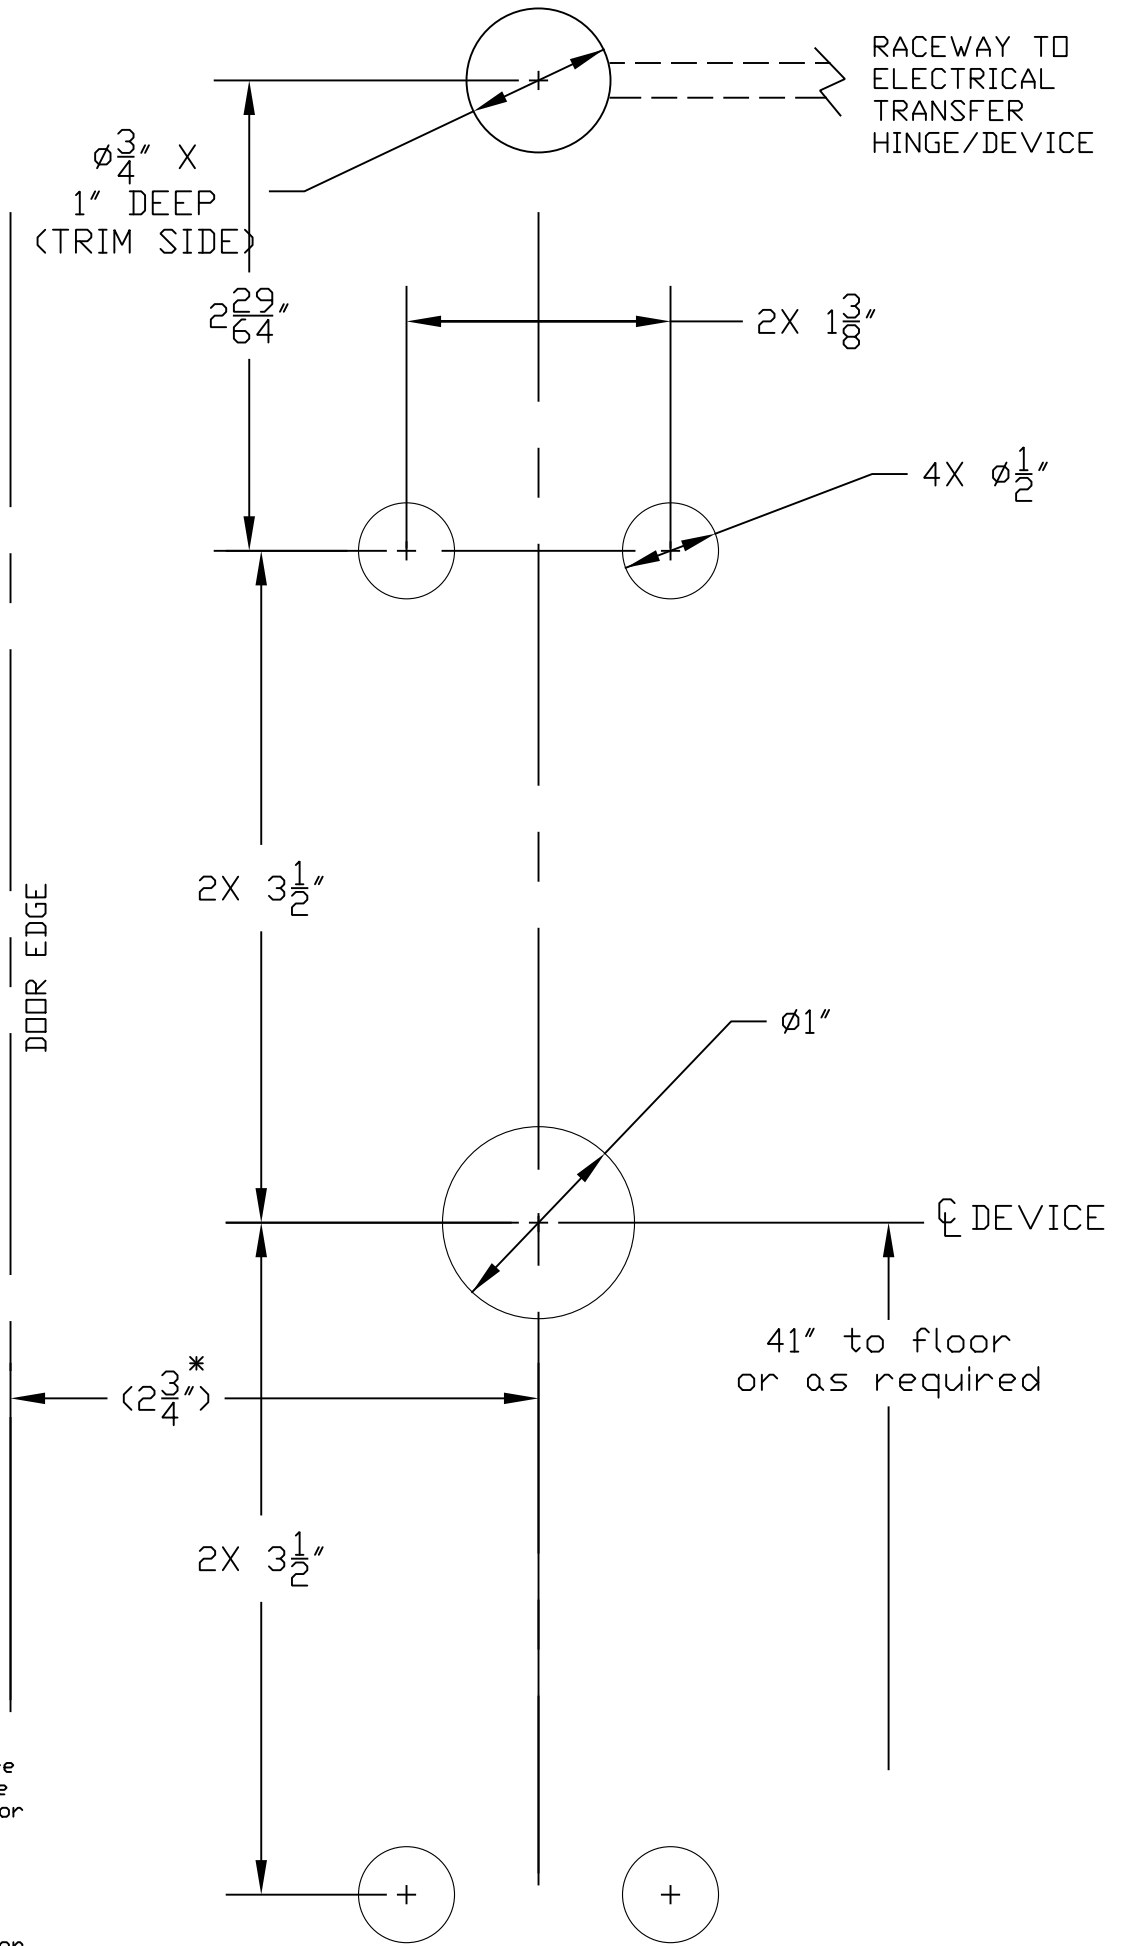

SEE EXIT DEVICE*
INSTRUCTIONS FOR
BACKSET & STRIKE
INFORMATION

RESPONSIBILITY
Door and Frame Manufacturers are
responsible for providing adequate
construction or reinforcements for
proper installation of hardware
shown. All architectural builders
hardware must be installed on
properly reinforced doors and
frames, regardless of the type,
material, or method of construction.

TEMPLATE SCALE IS 1:1 IF THIS MEASURES 1":